

# **MIRAGE**

COMMUNICATIONS EQUIPMENT



## **INSTRUCTION MANUAL**

### **B 1018 R 2-METER AMPLIFIER**

---

Mirage Communications  
300 Industrial Park Road  
(662) 323-8287

---

**CAUTION:** Read All Instructions Before Operating Equipment!

## Mirage B 1018 R

This compact, rugged, VHF RF power amplifier greatly improves signal-quality and range. This unit is a 110-watt power amplifier with associated control and protection circuitry.

This amplifier operates from any well-filtered direct-current 11-15 volt power source capable of supplying 30 amperes under full-load. The power source must be either negative grounded or totally ground independent.

***Warning, never use this unit with:***

- 1.) positive-ground supplies***
- 2.) vehicles having positive-ground batteries***
- 3.) power sources exceeding 16 volts***

***Always fuse power leads at the battery with 30-ampere fast-blow fuses.***

This amplifier has the following important features:

- 1.) Automatic RF actuated transmit and receive switching or manual switching
- 2.) Active bias for greatly improved SSB linearity
- 3.) True push-pull circuitry and clean RF layout for excellent stability
- 4.) Excess SWR and overdrive protection
- 5.) Remote control capabilities

## Table of contents

<b>0.0</b>	<b>Quick Connect</b>
	<i><u>Important:</u> Read this section first!</i>
<b>1.0</b>	<b>Mounting Considerations</b>
1.1	Cooling and Temperature
1.2	Power Wiring
1.3	RF and Controls Cables
1.4	Mobile Mounting Conderations
1.5	Repeater or Fixed Installations
<b>2.0</b>	<b>Radio or Exciter</b>
2.1	Drive Level
2.2	Duty Cycle
2.3	T/R Control or “Keying”
2.4	Wiring
<b>3.0</b>	<b>FM, CW and Non-Linear Modes</b>
3.1	Drive Power
3.2	Duty Cycle CW and FM
3.3	Feedlines and Antennas
<b>4.0</b>	<b>SSB and Linear modes</b>
4.1	Splatter and Distortion
4.2	Drive Power
4.3	Duty Cycle
4.4	T/R Control or Switching
4.5	Power Output
4.6	Antennas and Feedlines
<b>5.0</b>	<b>In Case of Difficulties</b>
5.1	Does Not Transmit or Receive at All
5.2	Nothing Lights or Seems to Work
5.3	Transmit OK, Does Not Amplify Receive
5.4	Receives OK, Does Not Amplify Transmit
5.5	Continuously Trips Fault Light
5.6	Relay Chatters or Clicks Off and On
5.7	Technical Assistance
5.8	Ordering Parts
<b>7.0</b>	<b>Notes</b>
<b>8.0</b>	<b>Schematic</b>

## **0.0 QUICK CONNECT**

- 1.) Mount or place the amplifier in a cool area. The best mounting position will place the long length of heatsink fins vertical.

*The amplifier must have sufficient cool air supply. Do not mount in confined or hot locations, or where exposed to moisture.*

- 2.) Connect the power leads to the battery or power supply.

*Be sure to fuse the red positive-lead at the battery or power supply with a 30-ampere fuse. The red lead must always be positive, with an operating voltage of 12-15 VDC. We do NOT recommend connecting the black lead directly to a vehicle battery terminal. Connect the black lead to the vehicle's chassis with a good solid connection.*

- 3.) Connect the radio to the UHF-style female **RADIO** connector with any length or type of good-quality 50-ohm coaxial cable.

*Any size or length 50-ohm coaxial cable will work on the INPUT, just be sure the jumper is good.*

- 4.) Connect the antenna (or power meter) to the **ANTENNA** connector through any length of good-quality 50-ohm coaxial cable capable of handling 200 watts of power.

*Any size or length 50-ohm cable will work, as long as losses are acceptable. The cable must safely handle 200 watts at 150 MHz. Be sure connectors are installed and soldered properly!*

- 5.) The switches in this unit are self-explanatory. They are **MODE**, **PRE-AMP**, and **POWER**.

- a.) The **MODE** switch adds time to the transmit-relay in the **SSB/CW** position. This allows SSB or CW operation without excessive relay chatter or word chopping. It is normally *not* necessary to use the **SSB/CW** mode position when using the **RELAY** port for relay control.

- b.) The **PRE-AMP** has no function on the B-1018-R.

- c.) The **POWER** switch controls the transmitting amplifier, and resets any overloads.

- 6.) The **FAULT** light illuminates whenever excessive drive power from the radio is applied, or reflected power from the antenna exceeds a preset value. This light indicates the protection circuits have locked-on, preventing the amplifier from keying.

---

**If the FAULT indicator is on, you must check drive power and antenna reflected power. Drive power must be below 5 watts and Reflected power must be below 20 watts (at full output). If SWR is over 2:1, it is unacceptable to run this unit at full power.**

---

## **1.0 MOUNTING CONSIDERATIONS**

To insure long life and optimum performance, pay careful attention to mounting and wiring. This unit has rubber feet for use where movement is not a problem.

***Warning, never install this unit in areas where:***

- 1.) ambient temperatures exceed 110°F (43°C)***
- 2.) exposed to moisture, excessive dust, or dirt***
- 3.) subjected to mechanical shock or vibration***

## **1.1 COOLING AND TEMPERATURE**

Reduced operating temperatures almost always extend the life of electronic components.

***If the heatsink becomes uncomfortable to touch, the amplifier may require additional cooling.***

Heatsink temperatures above 140°F indicate the need for additional cooling, such as re-mounting the amplifier in a cooler location or the addition of a small fan blowing on the heatsink. The general guideline is to watch the heatsink temperature, and improve cooling or reduce duty cycle if the heatsink is uncomfortable to touch.

**Note:** As temperature in the mounting area increases, especially if air is not moving, cooling becomes less effective and the amplifier will “run hotter”. If cooling is a problem, the largest change will come from forcing air over the heatsink with a small fan.

The heatsink in this amplifier is sized for ICAS operation at 160 watts carrier output with a 33% long-term duty cycle. Do not exceed 5 minutes total accumulated transmitting time without ten minutes of total accumulated resting time. This is a rough guideline; actual duty-cycle limitations depend on many factors.

If possible, especially if cooling might be marginal and there is no external air blowing across the heatsink, mount the amplifier with heatsink fins vertical. This allows natural convection to circulate air.

## **1.2 POWER WIRING**

This amplifier has two main power leads. The red lead connects to the floating (not grounded) positive 12-15 Vdc battery or power supply terminal. The black lead is the negative lead. It is grounded inside the amplifier, and is common with the metal case and all connector grounds.

To reduce fire hazards or the chance of equipment damage, the red lead must always be fused with a 30-ampere fuse ***at the battery***. Some power supplies have internal current protection.

Power supplies without current limiting must be protected by properly sized fuses located at the supply.

The black lead should connect to the negative terminal through the vehicle chassis. We do not recommend connecting the black lead directly to a battery post.

The heavy RED conductor and black battery return and/or chassis ground conductors carry full operating-current. This current can reach 30 amperes. For maximum power output, it is important to minimize the voltage drop along these conductors. For maximum output power, all high current leads (including the ground lead) should be kept as short as reasonably possible. Be sure connections are good. Never extract this power from under-dash wiring, unless the vehicle manufacturer tells you it is safe.

A fuse is must always be installed *at the battery* to prevent wiring fires. If a fuse is not added, you run the risk of a fire if the wiring is accidentally shorted between the battery and amplifier. NEVER omit this fuse, no matter how safe you think it is!

Suitable fuses and holders are generally available from electronics, car stereo, and automotive parts stores. This device requires a 30-ampere fuse.

The following chart gives the approximate peak voltage drop in volts per foot of a single supply wire with 30 amperes of current. This chart assumes the negative return to the battery (through the vehicle chassis) has the same resistance as the positive lead, or that a home power supply uses equal length and size conductors for positive and negative (ground) leads.

AWG (single conductor)	Voltage Drop at 30 amps	Maximum Length For Full Performance
10 gauge	0.03 V/ft	8 ft.
8 gauge	0.02 V/ft	12 ft.
6 gauge	0.011 V/ft	23 ft.
4 gauge	0.007 V/ft	36 ft.

For best performance, voltage drop in high-current positive and ground leads should be limited to 0.5 volts or less at maximum current of 30 amperes.

### **1.3 RF AND CONTROL CABLES**

Length of RF and control cables is *not* critical.

The **RADIO** connector of this amplifier is a SO-239 (UHF Female). UHF-style connectors are perfectly fine at frequencies below UHF, and have almost immeasurable loss at VHF and lower. The amplifier input is matched for 50-ohms, and the amplifier is very stable. The input cable can be any reasonable length, as far as the amplifier is concerned.

The **ANTENNA** connector is a SO-239 (UHF Female). The design load impedance is 50-ohms, and any load with a VSWR under 2:1. The output cable must safely handle the full power of the amplifier, and must have good connections.

Be sure connectors are installed and soldered properly, and the coaxial cables are of reasonably good quality.

Control cables can be any length, within reason, because current is low.

The **RELAY** jack is used to manually place the amplifier in the transmit-mode when it is pulled low (to ground). It is a conventional phono female connector (also called "RCA jack"). This type of connector is common with VCR's and other consumer electronic devices.

The current from this jack is less than 100 mA, and the open circuit voltage is less than 15 volts. There are no damaging back-pulses from this jack, it is fully buffered. Never apply voltage to this jack.

## **1.4 MOBILE MOUNTING CONSIDERATIONS**

### **A.) Location**

Do not locate this amplifier in excessively warm locations, near heater vents, or in unventilated areas with ambient temperatures exceeding 120 degrees Fahrenheit. Do not install this amplifier in damp or wet locations. Be sure air can circulate freely around the amplifier. Do not cover the heatsink. The best location for this unit is a well-ventilated area inside the passenger compartment. If the trunk area doesn't get too hot, it can also be a suitable location. Engine compartments should never be used to house this amplifier!

If possible, mount the amplifier with the LONG length of heatsink fins vertical. This will allow natural convection to circulate air deeply through the cooling fins. See section 1.1 for details on temperature.

### **B.) Wiring**

Make sure wiring is installed so wires are not pinched or cut. The length of high-current power and ground return leads is very important. Keep the heavy dc power-leads short as the installation permits. *This includes the ground lead to the battery or the vehicle's chassis.*

***Warning, all leads power must be fused at the battery! NEVER depend on fuses inside the unit for fire protection.***

- 1.) Use a 30 ampere fast-blow fuse at the battery positive connection***
- 2.) Ground the negative lead to a good ground on the vehicle's sheet metal***
- 3.) Never obtain main supply power from under-dash vehicle wiring***

***If the negative lead is connected directly to the battery (instead of the vehicle chassis or sheetmetal) it must have its own 30-ampere fuse installed at the battery***

**Note:** The length of the cable supplied with the optional remote control head is not critical.

The RF cables should not be excessively long, although they are not critical.

## **1.5 REPEATER OR FIXED INSTALLATIONS**

Mount the amplifier in any location that is cool, and has air circulation. It is best to mount this unit with the long length of the heatsink fins vertical. For extended duty, you may want to add a cooling fan.

The amplifier should be mounted as close to the power supply as possible. Section 1.2 details wiring considerations.

The power supply should be fused or have internal current limiting at a maximum current of 35 amperes. It should be well filtered and voltage-regulated at no more than 15 volts dc. A power supply with a crowbar or over-voltage protection system is a good idea, in case supply regulators fail.

Be sure to ground the case of the unit to the station ground buss with a heavy short lead. Lightning protection is a good idea, but the safest solution is to disconnect all antennas and unplug all equipment when not being used.

## **2.0 RADIO OR EXCITER**

This amplifier will work with almost any exciter or radio operating between 140 and 150 MHz. The most important guidelines are detailed in the following sections:

### **2.1 DRIVE LEVEL**

The radio or exciter used to drive this unit should have an output power between ½ and 5 watts. Do not drive this unit with more than 7 watts on FM, 2 watts carrier on AM, or 5 watts PEP on SSB (about 3 watts average power).

### **2.2 DUTY CYCLE**

The duty cycle of this unit is primarily limited by heatsink temperature. The more power output and hotter the ambient temperature, the more important cooling becomes. See section 1.1

### **2.3 T/R CONTROL OR “KEYING”**

This unit contains an internal RF sensing system. This system places the unit in a transmit-mode when the **POWER** switch is **ON**.

The rear-panel female phono (RCA) jack labeled **RELAY** can be used to manually force this unit to switch into a transmit mode. If the **POWER** switch is on, the internal transmitting relays will switch to the transmit mode when the **RELAY** is pulled low (grounded).



## **2.4 WIRING**

The exciter can be connected to the amplifier with any type of good quality 50-ohm coaxial cable. Length and cable size is not important, except as it might add signal loss if the cable is extremely long.

## **3.0 FM, CW AND NON-LINEAR MODES**

Good linearity is the faithful reproduction of input power level changes by the output power of the amplifier.

Some modulation methods or operating modes do not depend on distortion-free amplitude changes for transferring information. Non-linear modes include CW, FM, and FSK. The amplifier can “gain compress” or “flat-top” without changing signal quality or bandwidth, because the RF is either on or off.

This allows the amplifier to be driven to higher output levels with no detectable change in signal bandwidth.

### **3.1 DRIVE POWER**

Drive power on FM, CW, or FSK is limited by power ratings of transistors and heatsink temperature. The transistors are safely able to accept 5 watts of drive, which corresponds to approximately 110 watts carrier output.

***Do not trust unknown or questionable accuracy meters! Some meters are off by as much as 50% or more!***

### **3.2 DUTY-CYCLE CW AND FM**

The duty-cycle is set by ambient temperature, mounting position, operating power, and airflow. Temperature and mounting concerns are detailed in section 1.0. Driving-power concerns are detailed in section 2.0

If possible, especially if cooling might be marginal and there is no external air blowing across the heatsink, mount the amplifier with heatsink fins vertical. This allows natural convection to circulate air. See section 1.0 for details.

***Warning, the safe maximum temperature of the heatsink is 140°F. If the heatsink feels too hot to hold, it is almost certainly too hot for safe operation.***

### **3.3 FEEDLINES AND ANTENNAS**

This unit will work with any antenna as long as SWR at the OUTPUT of the amplifier is less than 2:1.

***Warning, never exceed 20 watts maximum reflected power. Try to keep SWR below 2:1. Make sure all feedline and antenna connections are good.***

### **4.0 SSB AND LINEAR MODES**

SSB and AM operation requires linear amplification of signals. If the amplifier is not linear, mixing products occur. These mixing products make the signal bandwidth increase, they are referred to as “splatter”. Amplifier gain changes with power level. One design goal of this amplifier was minimizing the effects of non-linearity, and reducing needless splatter.

***Unlike tube amplifiers, solid-state amplifiers go into gain compression long before they saturate. Even though this amplifier can produce 160 watts or more on carrier, do NOT expect to run 160 watts PEP and have acceptable IMD performance!***

In AM operation, carrier power is normally 25% or more of the peak envelope power as indicated on a true peak-reading meter. Unmodulated carrier output power should not exceed 5 watts. Peak-envelope output power should not exceed 100 watts when measured on an accurate peak reading meter.

### **4.1 SPLATTER AND DISTORTION**

At low power levels, amplifier gain is affected by bias settings. If bias is set too low, turning drive power down can actually make the ratio of distortion-to-signal worse (not better)!

This amplifier has an active-bias system, which forces the bias voltage to a fixed level. This system is vastly superior to conventional resistor/shunt-diode bias for maintaining operating-bias as drive power, temperature, and supply voltage varies.

At high power levels, three main problems limit linearity and cause splatter. All three problems are reduced or cured by turning the drive power down.

- 1.) Output-device current amplification (in this case transistors are used) is a problem. Transistors, unlike most vacuum tubes, show a gradual decrease in gain as drive level increases. It is important this amplifier be operated in the area where the gain-slope is linear or “rounded” in a sine curve to minimize splatter and IMD.

***Maximum SSB peak power is approximately 110 watts. This generally corresponds to an average power of 25 to 50 watts, depending on voice and compression characteristics.***

- 2.) Output-device voltage saturation caused by incorrect loading. If the amplifier is not properly matched to the load, the peak collector voltage can get too high. This can not only cause splatter; it can cause the output transistors to fail.
- 3.) As base current increases, the base-bias tends to shift negative. Many or most amplifiers with conventional resistor/ shunt-diode biased amplifiers actually move into class C (a non-linear mode) as the drive power is increased. This amplifier has active bias, and does not exhibit this problem.

In AM operation, carrier output power is normally *25% or more* of the peak envelope power as indicated on a true peak-reading meter. Unmodulated carrier output power should not exceed 5 watts.

## **4.2 DRIVE POWER**

To preserve signal quality in SSB and AM modes, amplifiers must be operated in the linear portion of their gain-curves. Since this amplifier has no tuning adjustments, the user can control only the load impedance (SWR) and drive power.

Many operators think RF power meters should show some fixed-ratio of carrier or “whistle” power to speech power. This is not correct. The ratio varies greatly with many factors, including the operator’s voice. Pushing up the drive power to “see” a certain output power on a meter that is NOT a true peak-reading meter is a mistake.

***Power should be measured on a true peak-reading meter. Many manufacturers market meters that are not actual peak-reading meters, even though they call the meters peak-reading. If you have a meter like that, you will find it impossible to properly determine drive settings on SSB using the meter.***

***If you do not have a true peak-reading meter, either an oscilloscope or off-the-air reports can be used to determine if you are driving the amplifier too hard.***

The proper drive power for this amplifier is a drive power allowing output power peaks to reach approximately 2/3 of the saturated output power, as measured on a true peak-reading meter. Maximum power output for good linearity is 110 watts PEP, as indicated on a properly working PEP-reading meter.

In AM operation, carrier output power is normally *25% or more* of the peak envelope power as indicated on a true peak-reading meter. Unmodulated carrier power should not exceed 15 watts; peak envelope power on AM should not exceed 100 watts or so.

### **4.3 DUTY CYCLE**

The duty cycle of this amplifier is limited by temperature considerations. In normal AM or SSB operation, the duty-cycle is set by ambient temperature, mounting position, operating power, and airflow. Temperature and mounting concerns are detailed in section 1.0. Driving-power concerns are detailed in section 4.2.

The maximum *PEAK* amplifier output power on SSB and AM is 110 watts PEP. At the maximum power output of 110 watts, this amplifier will normally provide a 100% duty cycle without overheating.

If possible, especially if cooling might be marginal and there is no external air blowing across the heatsink, mount the amplifier with heatsink fins vertical. This allows natural convection to circulate air. See section 1.0 for details.

***Warning, the safe maximum temperature of the heatsink is 140°F. If the heatsink feels too hot to hold, it is almost certainly too hot for safe operation.***

### **4.4 T/R CONTROL OR SWITCHING**

This amplifier has an internal RF sensing system that places it in the transmit mode when RF is applied. A front-panel **MODE** switch activates an internal hang-delay timer for SSB (or CW) operation. This hang-time allows the relays to remain energized without input power for a few seconds.

The hang-time is controlled by R8, located at the front and center of the board behind the **MODE** switch. Delay is normally set for 1 second at the factory.

### **4.5 POWER OUTPUT**

The maximum power output for clean linear SSB service is 110 watts PEP. Antenna SWR should be as low as possible. The 13.8-volt 30-ampere power source must not have hum or ripple. The voltage should have less than 0.2 volts sag under full-load for best linearity.

### **4.6 ANTENNAS AND FEEDLINES**

Any antenna and 50-ohm feedline can be used, providing it presents less than 2:1 SWR to this amplifier. Linearity and splatter will be better controlled if SWR is as low as possible, with a 1:1 SWR ratio (unity SWR) being ideal.

Be sure to use proper lightning protection techniques when using this amplifier for home or fixed operation.

## **5.0 IN CASE OF DIFFICULTY**

Always be sure the power is connected properly (section 1.2) and the RF connections are correct (section 1.3).

### **5.1 DOES NOT TRANSMIT OR RECEIVE AT ALL**

*Does the radio work OK with the amplifier removed from the system and replaced with a barrel connector without changing anything else? If so, read section 1.2. The coax connectors that attach to the amplifier, or the amplifier, may be the problem.*

If the radio does NOT work ok, you probably have a bad jumper cable or bad coaxial cable.

### **5.2 NOTHING LIGHTS OR SEEMS TO WORK**

Check the power wiring and fuses. The amplifier has an internal fuse also.

Read section 1.2

### **5.3 RECEIVES OK, DOES NOT AMPLIFY TRANSMIT**

*Does your radio transmit OK without the amplifier removed and replaced with a barrel connector? If not, see 1.3, 2.4, 4.4,*

*Is SWR okay, both with the amplifier in-line and out-of-line? See 3.5,4.6*

### **5.4 CONTINUOUSLY TRIPS FAULT LIGHT**

Check transmitter power. Be sure to check the PEAK power, because some radios transmit a pulse greatly exceeding the continuous power. If your radio has this problem, it is unsuitable for any amplifier because it will eventually damage the amplifier's transistors. See sections 2.1,3.1,and 4.2

Check the SWR and reflected power. Look for bad cable connections. See sections 1.3, 2.4, 3.5, and 4.6

### **5.5 RELAY CHATTERS OR CLICKS OFF AND ON**

RADIO and ANTENNA leads are reversed

Drive power is too low (under ½ watt)

## **5.6 TECHNICAL ASSISTANCE**

Technical assistance is available Monday through Friday by calling 662-323-8287 between the hours of 8:00 a.m. and 4:30 p.m. central time.

Please be sure you have check the obvious problems, and that you have the model number and information about your radio and power meter available.


## **5.7 ORDERING PARTS**

Parts are available direct from Mirage, either by calling 662-323-8287; faxing 662-323-6551 or writing to Mirage, 300 Industrial Park Road, Starkville, MS 39759. When faxing or writing, be sure to include a phone number you can be reach at during Mirage business hours.


Please have a credit card number available over the phone (do NOT include credit card information in the mail), or prepay the order with a check after calling for prices.

Part numbers are listed after the schematic. Be sure you have the full part description, the model and serial number (if used on this product), and the part number.


## 8.0 SCHEMATIC

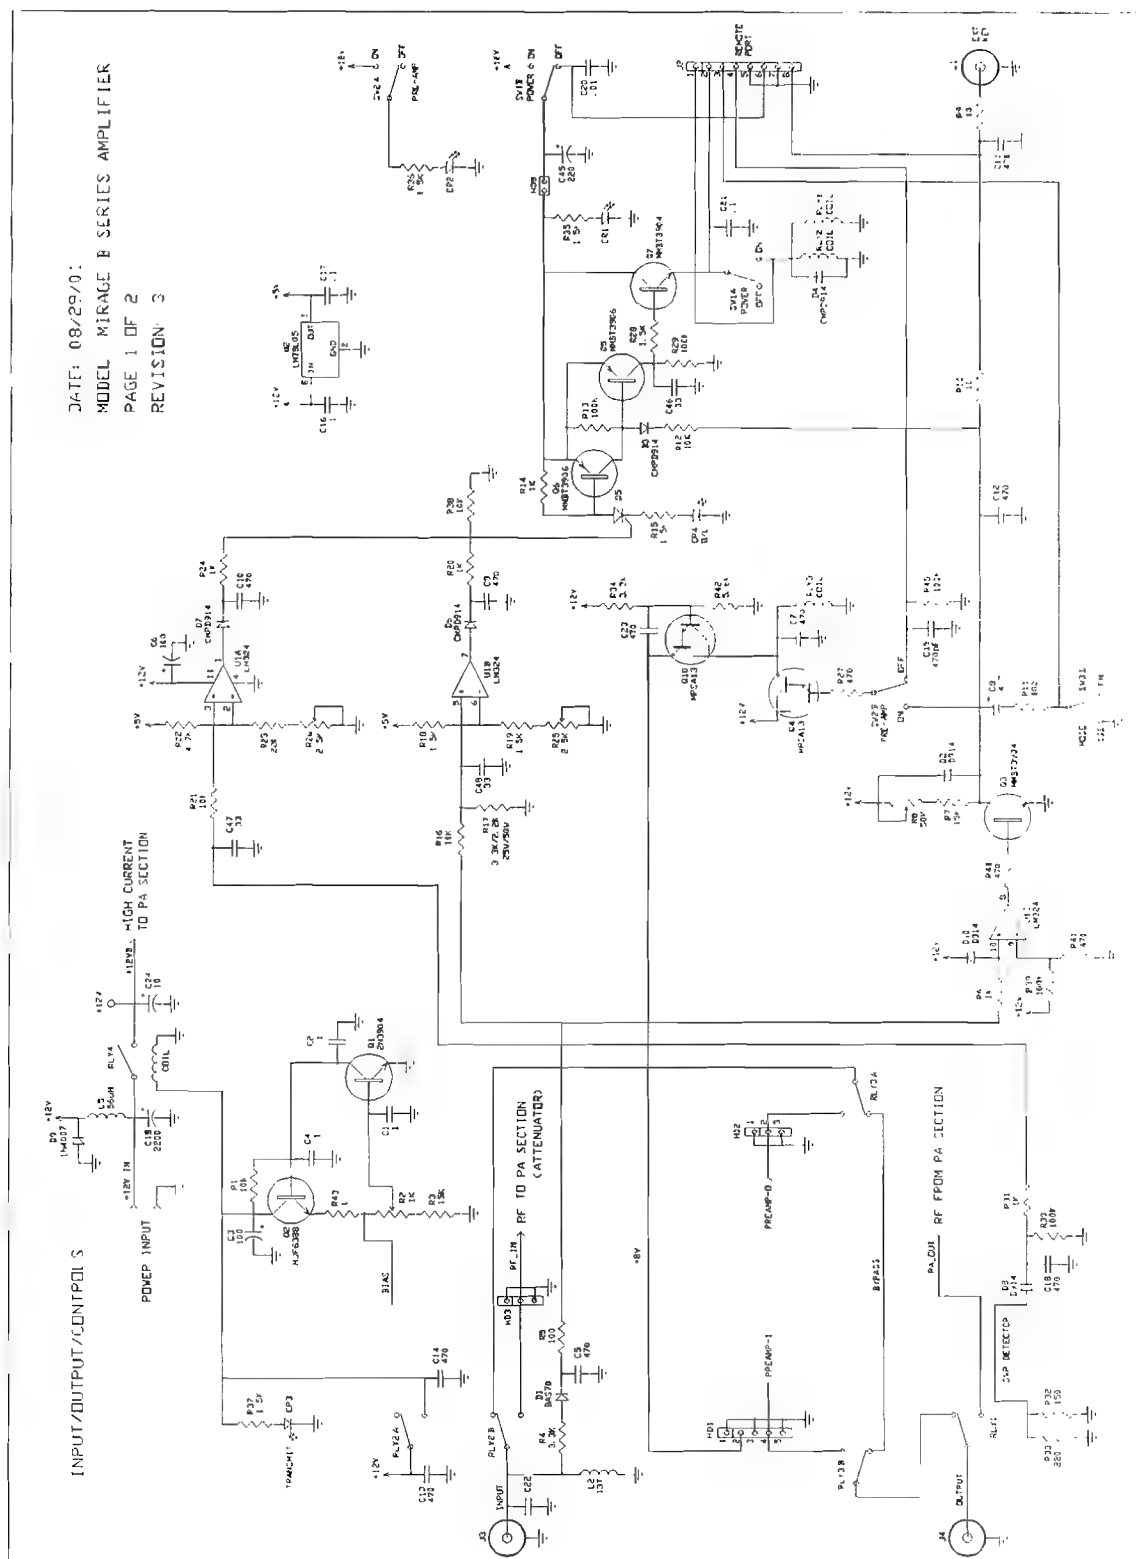


DATE: 08/29/01  
 MODLL: MIRAGE B SERIES AMPLIFIER  
 PAGE 2 OF 2  
 REVISION: 3

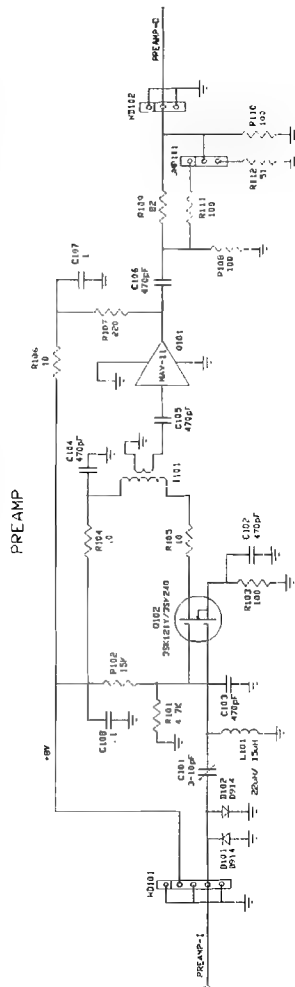

# ATTENUATOR

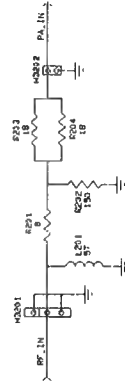

# POWER AMPLIFIER

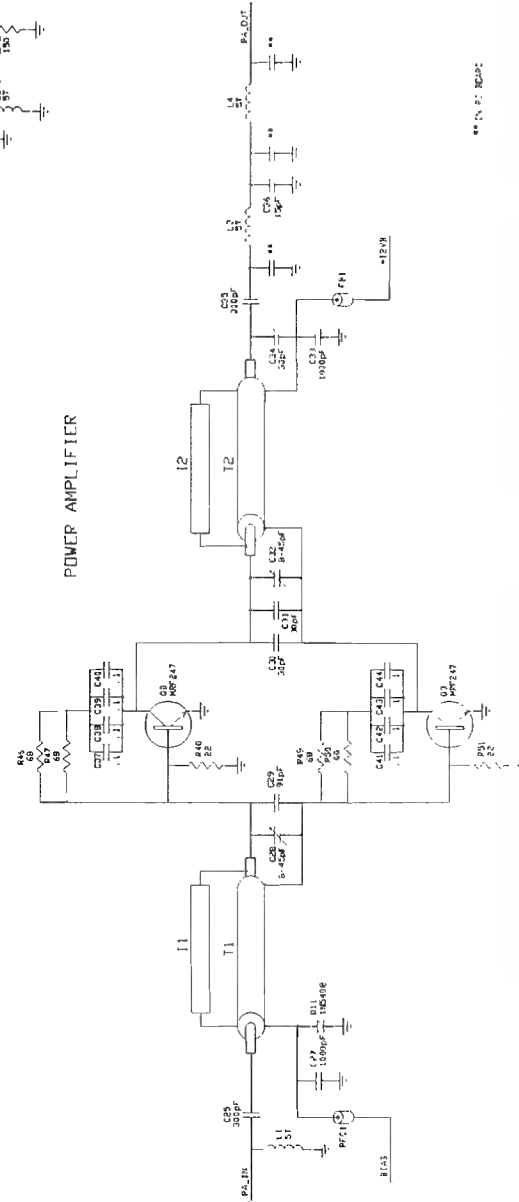

\*\* IN. P. 100P2



**Notes:**

## DISCLAIMER

Information in this manual is designed for **user purposes only** and is *not* intended to supersede information contained in customer regulations, technical manuals/documents, positional handbooks, or other official publications. The copy of this manual provided to the customer will *not* be updated to reflect current data.

Customers using this manual should report errors or omissions, recommendations for improvements, or other comments to MFJ Enterprises, 300 Industrial Park Road, Starkville, MS 39759. Phone: (662) 323-5869; FAX: (662) 323-6551. Business hours: M-F 8-4:30 CST.



# **MIRAGE**

## **COMMUNICATIONS EQUIPMENT**

300 Industrial Park Road  
Starkville, MS 39759 USA  
Tel: 662-323-8287  
Fax: 662-323-6551

---

### ***ONE YEAR LIMITED WARRANTY***

Any Mirage Communications product found to be defective in materials or workmanship will be repaired or replaced (at Mirage's option) for a period of one year from the date of original purchase.

During the warranty period Mirage Communications will provide, free of charge, both parts and labor necessary to correct defects in material or workmanship.

To obtain such warranty service, the original purchaser must:

- (1) Provide "proof of purchase".
- (2) Ship the product in its original container or equivalent, fully insured and shipping charges prepaid, to Mirage, as addressed below.
- (3) Mirage agrees to repair without charge to the original owner any defective product under warrantee provided the product is returned with postage prepaid to Mirage with a personal check, cashiers check, or money order for **\$10.00** covering postage and handling.

All internal adjustments are factory set for best performance consistent with reliable operation. Changing internal adjustments may void this warranty.

Improper maintenance or repair may also void this one year warranty. We recommend that units requiring repair during the warranty period be returned to the factory.

Using Mirage non-repeater amplifiers for repeater operations is not recommend and will void this warranty.

Mirage assumes no responsibility for any item connected to or used in conjunction with this product.

The foregoing constitutes Mirage's entire obligation with respect to this product and the original purchaser and any user or owner shall have no remedy and no claim for incidental or consequential damages.

All Mirage products to be serviced, in-warranty or out-of-warranty, should be shipped, freight paid, to:

**Mirage**  
**300 Industrial Park Road**  
**Starkville, MS 39759 USA**

Product must be accompanied by a letter describing the problem in detail. **Be sure to include YOUR NAME, ADDRESS, AND TELEPHONE NUMBER!** This warranty gives specific legal rights and you may also have other rights which vary from state to state.